


KEYPAD FUNCTIONS		LED
ON / OFF BLOWER Press 1 time : Blower starts Press 2 times : Blower stops	ON OFF	ON OFF
SPEED INCREASE Press and hold to increase the blower speed. Release pressure at the desired speed.	^	ON (WHEN PRESSED)
SPEED DECREASE Press and hold to decrease the blower speed. Release pressure at the desired speed.	v	ON (WHEN PRESSED)
BLOWER CYCLES 1 st Press: Wave cycle: - Speed goes gradually from maximum to minimum 2 nd Press: Pulse cycle - Speed goes rapidly from minimum to maximum 3 rd Press: Returns to medium speed	🌀	ON BLINK OFF

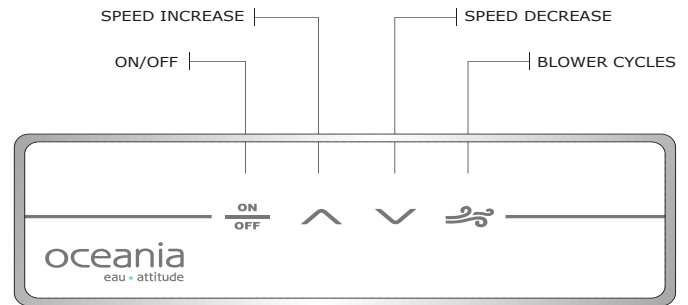

Standard purges:

A 2 minute purge will occur 13 and 40 minutes after the blower has stopped.

NB: After a power surge, the "Standard purge" will be activated.

Programming: No purge

Within 60 seconds when powered "ON"

Activation: Press and hold ^ for 3 seconds and release:

- All LEDs will blink 2 times indicating that 13 min, and 40 min. purges are cancelled.
- All LEDs will blink 1 time indicating that 13 min. and 40 min. standard purges are activated.

Programming: 24 hours purge

60 seconds after being powered "ON"

Activation: Determine an hour when you want the purge to start.

- At desired hour; press and hold ^ for 5 seconds and release.
- All LEDs will blink 2 times indicating that the 24H purge cycle is activated.
- From that time, the purge will start daily at that hour (ex.: 9:00 a.m.)

Desactivation: Press and hold ^ for 5 sec., All LEDs will blink 1 time, indicating that the 24 Hour is desactivated. Standard purge will now be on.

Power programming: standard: Min: 17% / Startup: 50% / Max: 83%

Startup and maximum power: Min: 17% / Startup: 30% / Max: 50%

Within 60 seconds when powered "ON"

Activation: Press and hold v for 3 sec. and release:

- All LEDs will blink 2 times to indicate that startup and maximum speed are modified.
- All LEDs will blink 1 time that speed is back to standard mode.


Minimum power: Min: 12% / Startup: 50% / Max: 83%

60 seconds after being powered "ON"

Activation: Press and hold v for 5 sec. and release:

- All LEDs will blink 2 times to indicate that minimum power is reduced at 12%.
- All LEDs will blink 1 time to indicate that minimum speed is back to normal (17%).

KEEPAD FUNCTIONS		LED
ON / OFF BLOWER Press 1 time : Blower starts Press 2 times : Blower stops		ON OFF
SPEED INCREASE Press and hold to increase the blower speed. Release pressure at the desired speed.		ON (WHEN PRESSED)
SPEED DECREASE Press and hold to decrease the blower speed. Release pressure at the desired speed.		ON (WHEN PRESSED)
BLOWER CYCLE 1 st Press: Wave cycle: - Speed goes gradually from maximum to minimum 2 nd Press: Pulse cycle - Speed goes rapidly from minimum to maximum 3 rd Press: Returns to medium speed		ON BLINK OFF
CHROMATHERAPY Press to activate chromatherapy. See different light options below		ON (WHEN PRESSED)

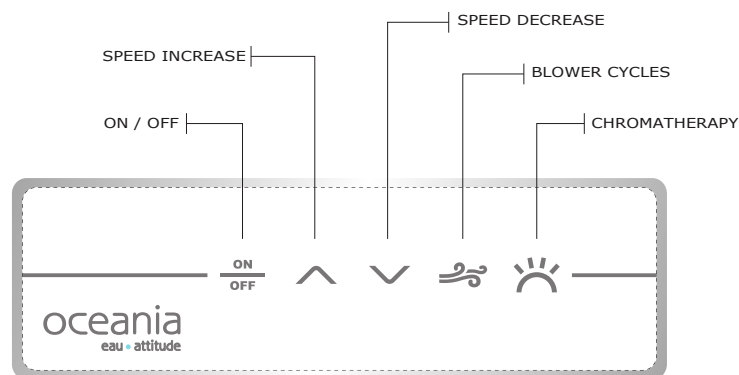

CHROMATHERAPY	LED	INFLUENCE
CHROMATHERAPY COLORS		
Press 1 time : WHITE	ON	
Press 2 times : Turn off the light	OFF	
Press 3 times : Rainbow cycle / Low speed	ON	
Press 4 times : Turn off the light	OFF	
Press 5 times : Rainbow cycle / High speed	ON	
Press 6 times : Turn off the light	OFF	
Press 7 times : Turquoise	ON	Regenerates, calms sudden pain,relaxes intellect.
Press 8 times : Turn off the light	OFF	
Press 9 times : Blue	ON	Promotes peace and tranquility,opens conscious mind.
Press 10 times : Turn off the light	OFF	
Press 11 times : Magenta	ON	Harmonizes emotions.
Press 12 times : Turn off the light	OFF	
Press 13 times : Red	ON	Stimulates circulatory system, promotes vitality and energy
Press 14 times : Turn off the light	OFF	
Press 15 times : Orange	ON	Stimulates respiratory and nervous system,anti fatigue.
Press 16 times : Turn off the light	OFF	
Press 17 times : Yellow	ON	Energizes intellectual stimulation, fortifies and relaxes.
Press 18 times : Turn off the light	OFF	
Press 19 times : Green	ON	Calms the nervous system, fortifies and relaxes vision.
Press 20 times : Turn off the light	OFF	
Press 21 times : Back to rainbow cycle	ON	
*** Press and hold 2 sec. at any time to turn off chromatherapy.		

KEYPAD FUNCTIONS

LED

DUO SYSTEM

BLOWER & CYCLES

Press 1 time : Blower starts
Press 2 times : Blower stops

While the blower is ON, if you press and hold:
3 sec.: Wave cycle: Speed goes gradually from maximum to minimum.
6 sec.: Pulse cycle: Speed goes rapidly from maximum to minimum



ON
OFF

Blinks rapidly

Blinks rapidly

BLOWER SPEED VARIATION

1 st Press: Press and hold to increase the blower speed, release at desired speed.
2 nd Press: Press and hold to decrease the blower speed, release at desired speed.



ON
(WHEN PRESSED)

ON/OFF PUMP AND CYCLES

Press 1 time : Pump starts
Press 2 times : Pump stops

While the pump is ON, if you press and hold:
3 sec.: Wave cycle: Speed goes gradually from maximum to minimum.
6 sec.: Pulse cycle: Speed goes rapidly from maximum to minimum



ON
OFF

Blinks rapidly

Blinks rapidly


PUMP SPEED VARIATION

1 st Press: Press and hold to increase the pump speed, release at desired speed.
2 nd Press: Press and hold to decrease the pump speed, release at desired speed.



ON
(WHEN PRESSED)

2: BLOWER SPEED VARIATION | 3: PUMP & CYCLES
1: BLOWER & CYCLES | 4: PUMP SPEED VARIATION

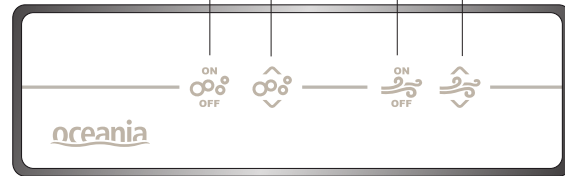

ADVANCED PROGRAMMING

INTEGRATED 20 MINUTE AUTOMATIC TIMER

- COMPLETE SYSTEM: If the blower and pump are used, when the blower is turned on first, countdown starts with it.
- If the pump is turned on first, they each have their own countdown.

DRYING CYCLE (2 different purge options)

- 1- A 2 minute purge will occur 13 minutes after the blower has stopped. The LED will blink to indicate that the countdown has started
- 2- A 2 minute purge will occur 40 minutes after the system has detected the presence of water. After the purge, the system will check for presence of water again. If there is still water, another 40 minutes countdown will start.

*** The LED will blink to indicate that the countdown has started. Both purges are independent from each other. When both purges are in their countdown phase, they will blink alternatively.

KEYPAD FUNCTIONS

COMFORT AIR / DYNAMIC TURBO

ON/OFF (BLOWER / PUMP)

Press 1 time : Blower starts
Press 2 times : Blower stops



SPEED VARIATION (BLOWER / PUMP)

1 st Press: Press and hold to increase the speed, release at desired speed.
2 nd Press: Press and hold to decrease the speed, release at desired speed.




CYCLES (BLOWER / PUMP)

1 st Press: Wave cycle - speed goes slowly from max. to min.
2 nd Press: Pulse cycle - speed goes rapidly from max. to min.
3 rd Press: Returns to maximum speed



ON/OFF | SPEED VARIATIONS | CYCLES

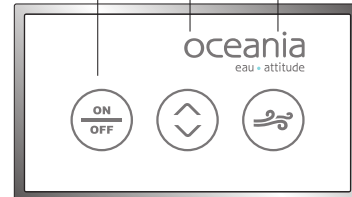

ADVANCED PROGRAMMING

INTEGRATED 20 MINUTE AUTOMATIC TIMER

Integrated 20 minute automatic timer on the system.

DRYING CYCLE

A 1 minute automatic drying cycle will start 20 minutes after the blower is turned off.