

Installation Instructions for Access Panels


A) Clean all around the opening using a soft cloth and wood alcohol.



B) Clean all around the inner perimeter of the access panel, using wood alcohol.



Step 2

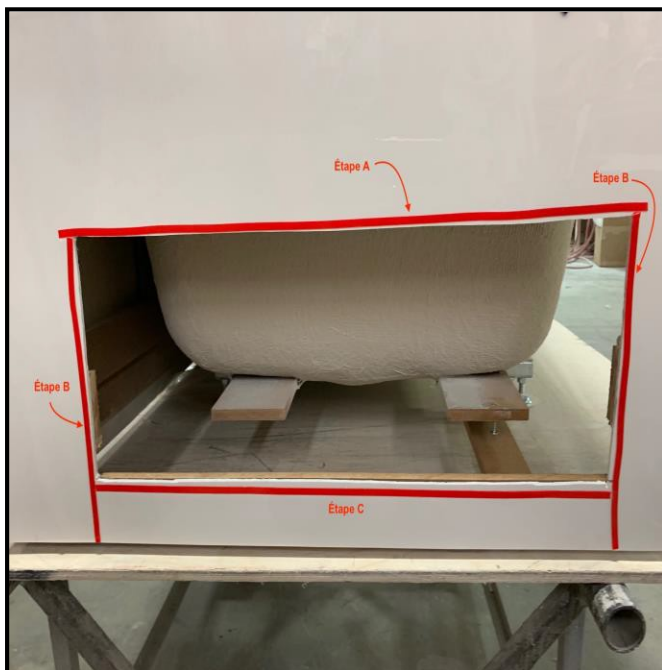

A) Install the double-sided tape horizontally over the opening. Do not exceed more than $\frac{3}{4}$ " on each side.

B) Install the double-sided tape vertically, on each side of the opening, starting up and going down, without overlapping the joints.

C) Install the double-sided tape horizontally, below the opening, without overlapping the joints.

D) Press firmly all over the tape.

Step 3

A) Remove the protective film on the double-sided tape.



Step 4

A) Apply silicone in the groove of the access panel.



Step 5

A) Align the access panel with the side of the bathtub and press firmly.



Step 6

A) Clean the excess of silicone and apply one last line of silicone on top, and on each side of the access panel. Let cure for 24 h before use.

