


oceania

water • attitude


Installation Instruction for Optimale Series

Angular Mounting (MA)

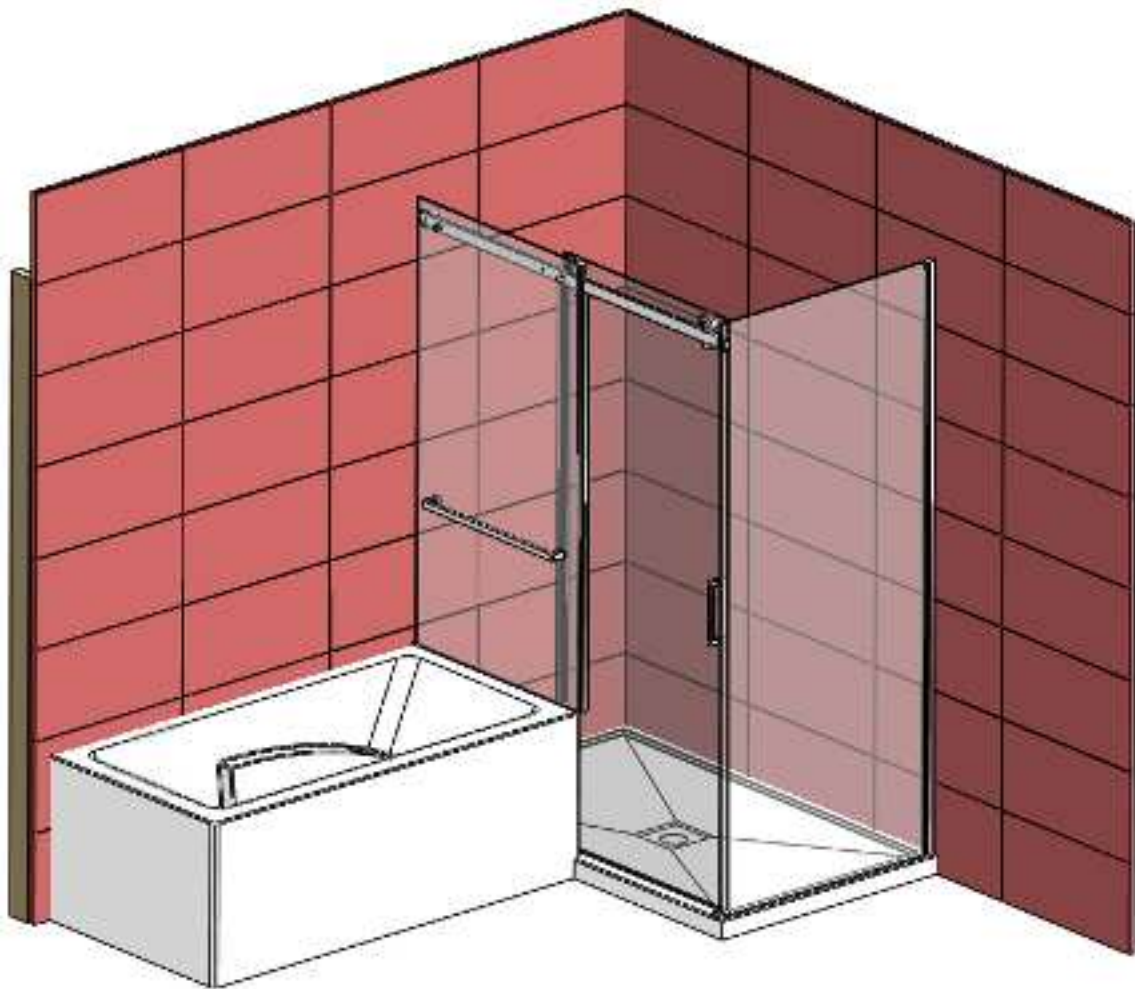


1. Place the bathtub and the base in their final position. Adjust the legs of the bathtub so that they support the tub.

The top of the bathtub must be levelled on both sides, and must be at 19 ¼" distance from the top of the base (14 7/8" for an Urbania tub). Mark the position of the base.

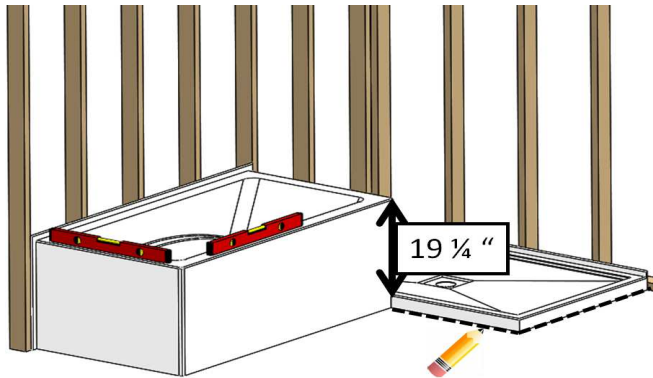

2. Remove the bathtub and install the base as described in the Installation Manual provided with the base.

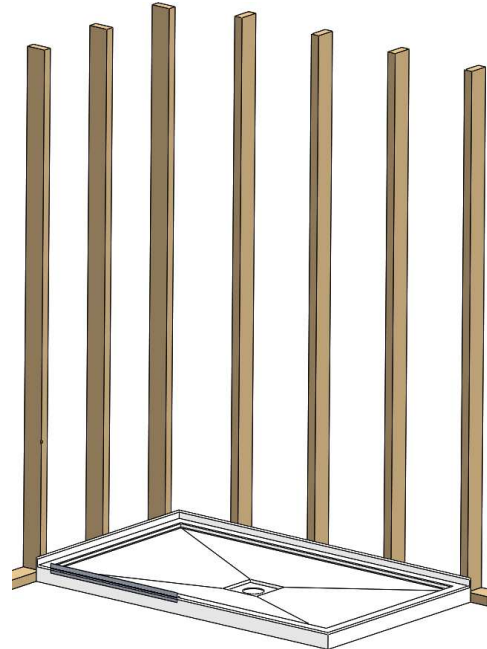

3. Install the faucets, the drain and the overflow. Please note that the faucets can be wall or floor mounted.


Use flexible hoses for hot/cold water supply.

Connect the bath drain into the floor drain without any glue to make sure the installation is appropriate.




4. Place the bathtub on blocks above its final position. Make required connections (hot/cold water, chromotherapy light, keypad, water detector, blower). The blower can be relocated away from its position inside the skirt, to allow an easy access.


Test water supply connections and test drain to make sure there is no leakage. After testing, use a small container to collect water under the bath.

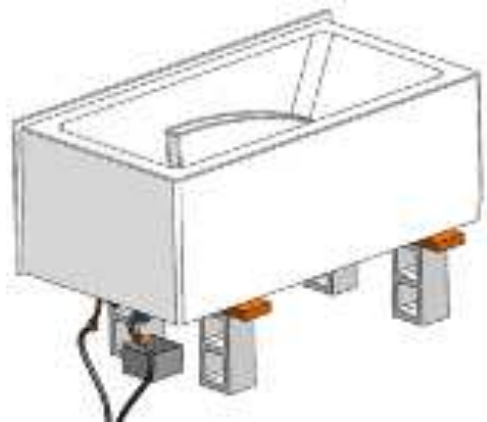

5. Apply a generous line of silicone on the side of the base where it comes into contact with the bathtub (along the tiling flange).

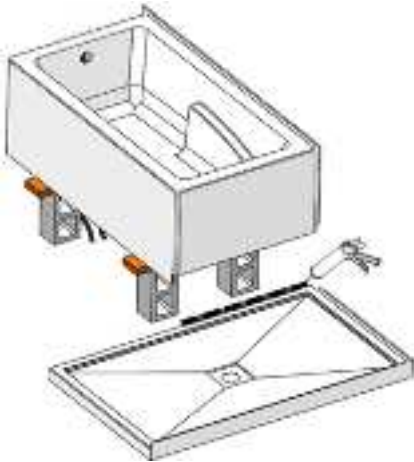


6. Remove the blocks, place the bathtub in its final position, and connect the drain.

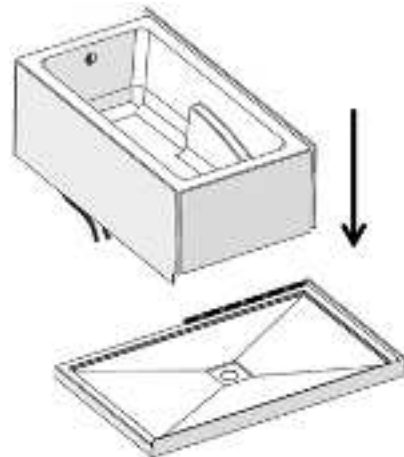


Note : For a more finished look, apply a bead of silicone where the bathtub meets the shower base.


7. Make sure there are 2 studs in the following locations (one at the end of the base, the other next to the bathtub's side). These studs will be necessary for the installation of the door wall jambs.

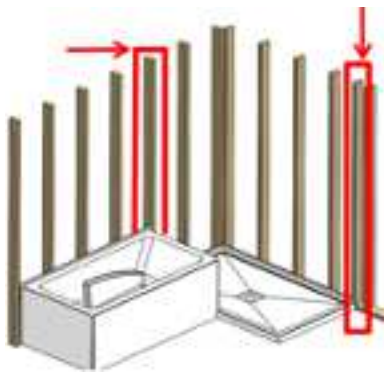

8 Secure the bathtub in place by fastening drywall screws into the studs above the bathtub flange.

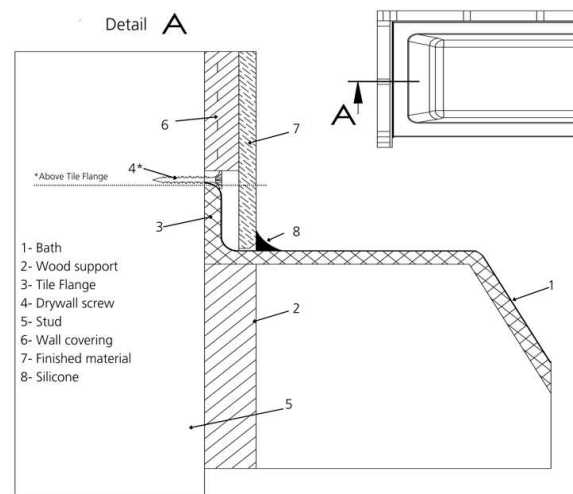

9. Install the drywall and the tiles.

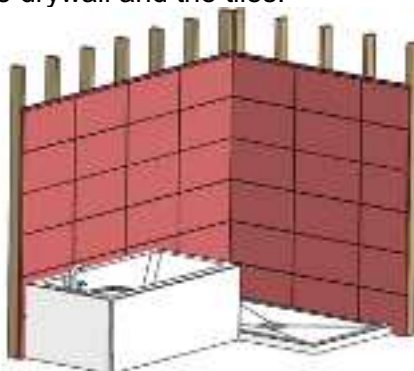

10. Install shower doors.

Follow instructions at the end of this document.

Installation Instructions for Access Panels


A) Clean all around the opening using a soft cloth and wood alcohol.



B) Clean all around the inner perimeter of the access panel, using wood alcohol.



Step 2

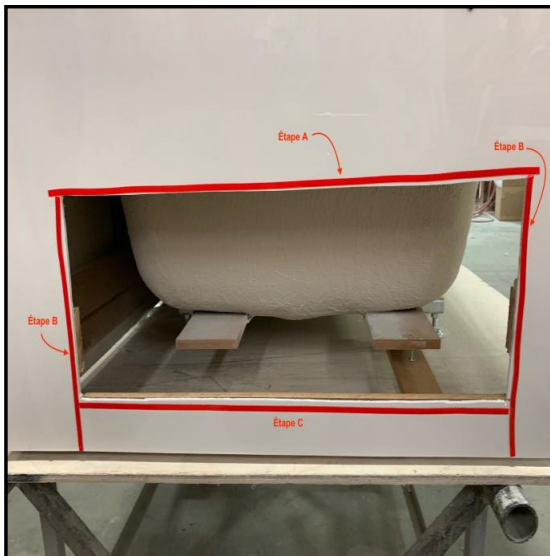

A) Install the double-sided tape horizontally over the opening. Do not exceed more than $\frac{3}{4}$ " on each side.

B) Install the double-sided tape vertically, on each side of the opening, starting up and going down, without overlapping the joints.

C) Install the double-sided tape horizontally, below the opening, without overlapping the joints.

D) Press firmly all over the tape.

Step 3

A) Remove the protective film on the double-sided tape.



Step 4

A) Apply silicone in the groove of the access panel.



Step 5

A) Align the access panel with the side of the bathtub and press firmly.




Step 6

A) Clean the excess of silicone and apply one last line of silicone on top, and on each side of the access panel. Let cure for 24 h before use.




Montage Angulaire (Angular Mounting)

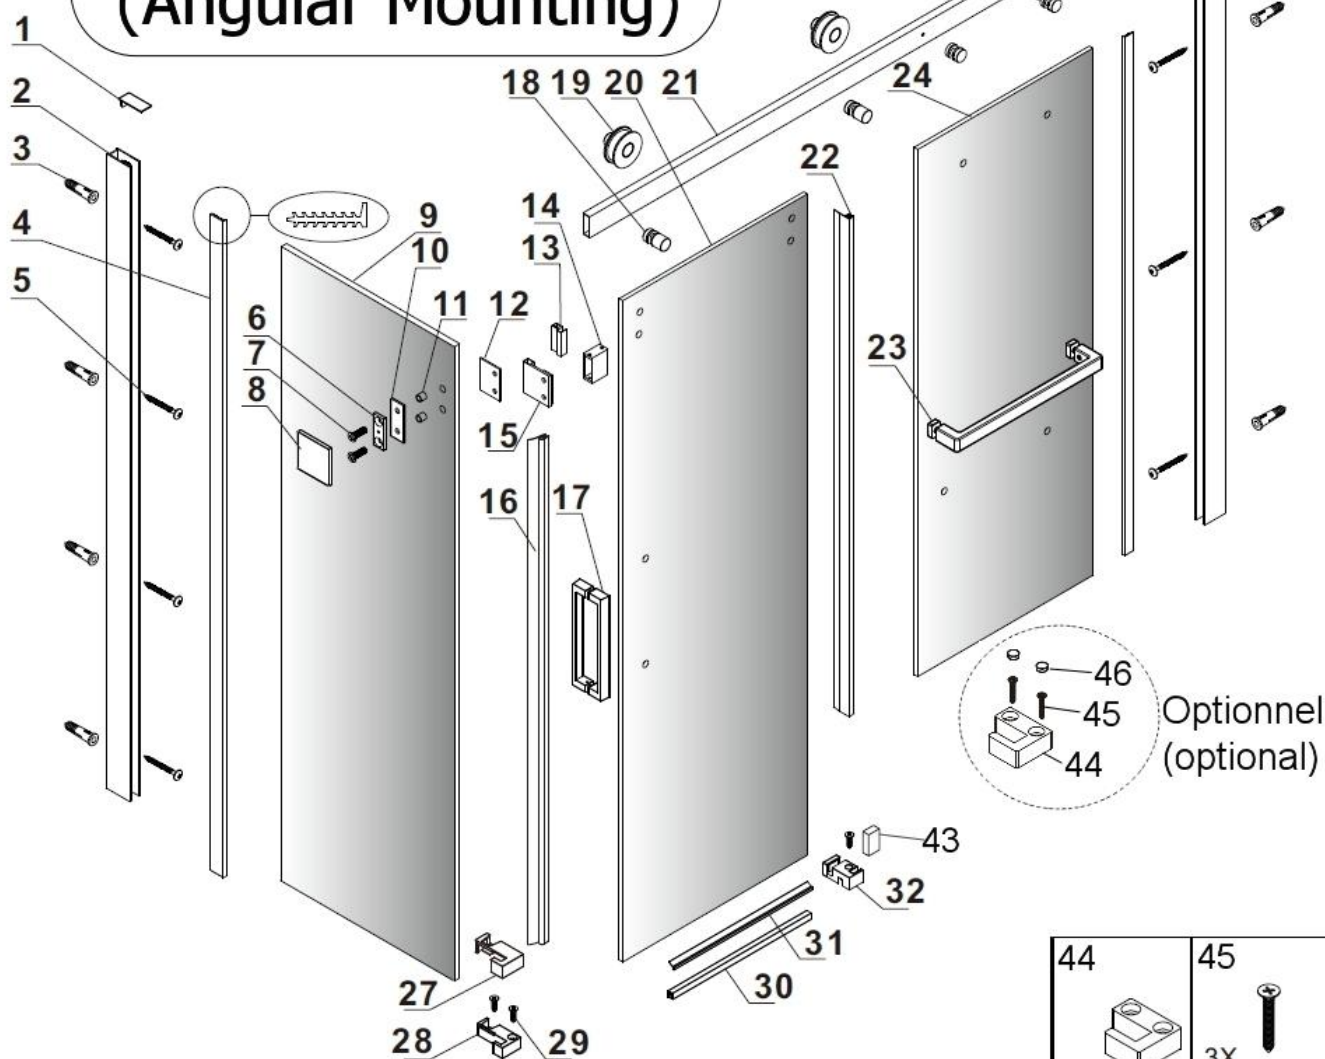

Optionnel
(optional)



44	45	46
1X	3X ST4X25	2X Φ8.7mm

1 2X	2 2X	3 8X	4 2X	5 8X ST4X40	6 1X	7 2X	8 1X	9 1X	10 1X	11 2X
12 1X	13 1X	14 1X	15 1X	16 1X L=1886	17 1X	18 2X	19 2X	20 1X	21 1X	22 1X
23 1X	24 1X	25 1X	26 2X	27 1X	28 1X	29 3X ST4X25	30 1X	31 1X	32 1X	33 1X
34 1X	35 1X	36 1X	37 1X 2.5mm	38 1X 4.0mm	39 1X 3.0mm	40 4X	41 1X Φ5mm	42 1X	43 1X	44 2X Φ5.2mm

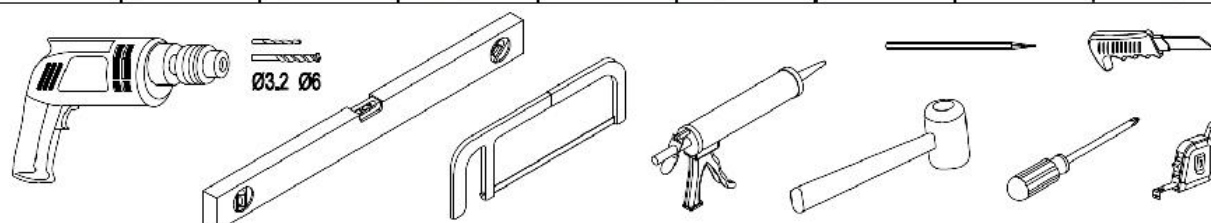



model	A (mm)		A (")	
	min	max	min	max
60	1473	1493	58	58 3/4

model	B (mm)		B (")	
	min	max	min	max
32	769	779	30 1/4	30 5/8
36	871	881	34 1/4	34 5/8
42	1024	1034	40 3/8	40 3/4
48	1176	1186	46 1/4	46 3/4

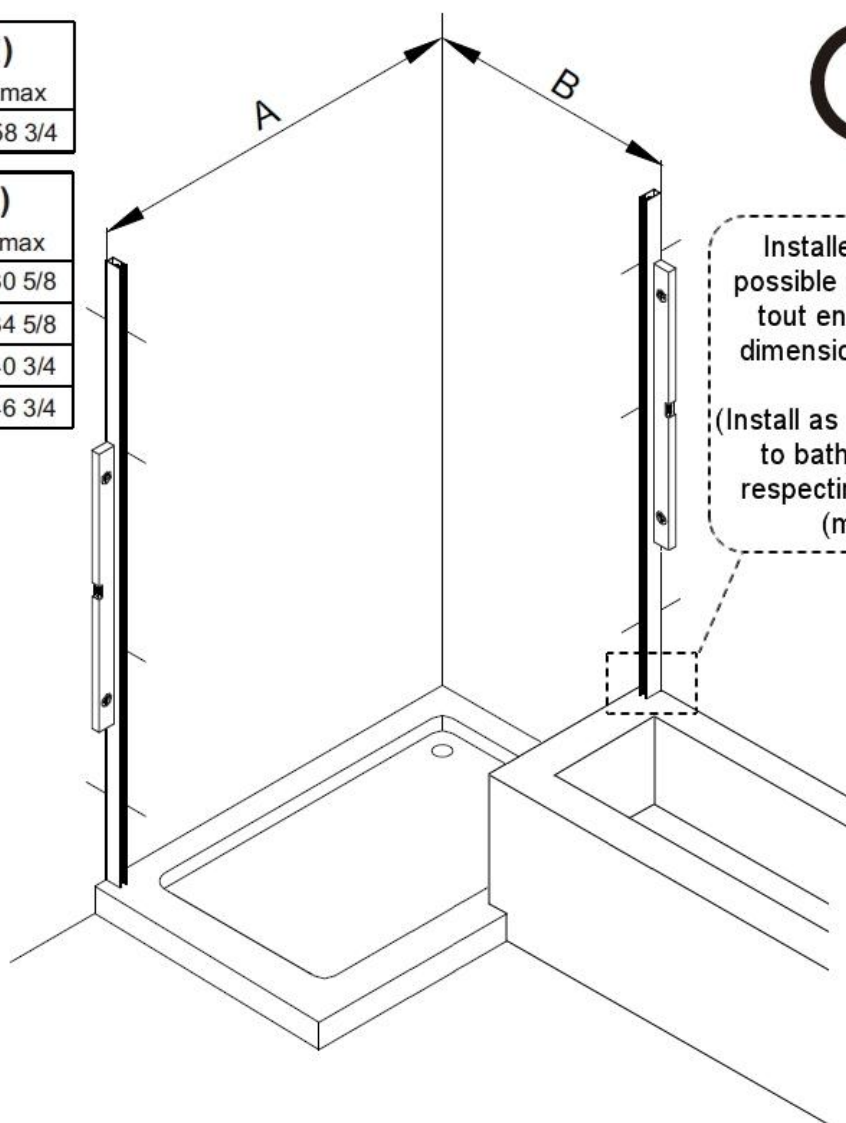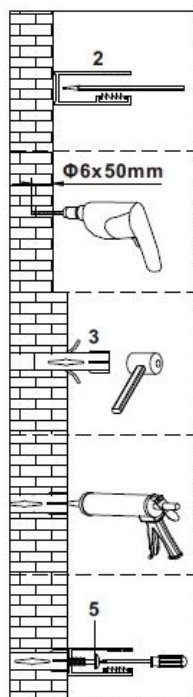






Installer le plus près possible du bord du bain tout en respectant la dimension B (min/max).

(Install as close as possible to bathtub end while respecting dimension B (min/max)).



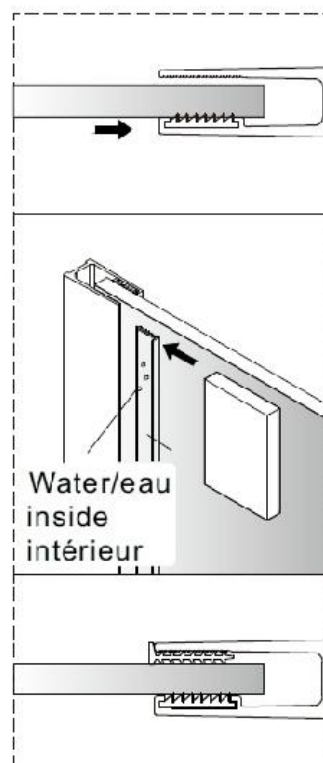
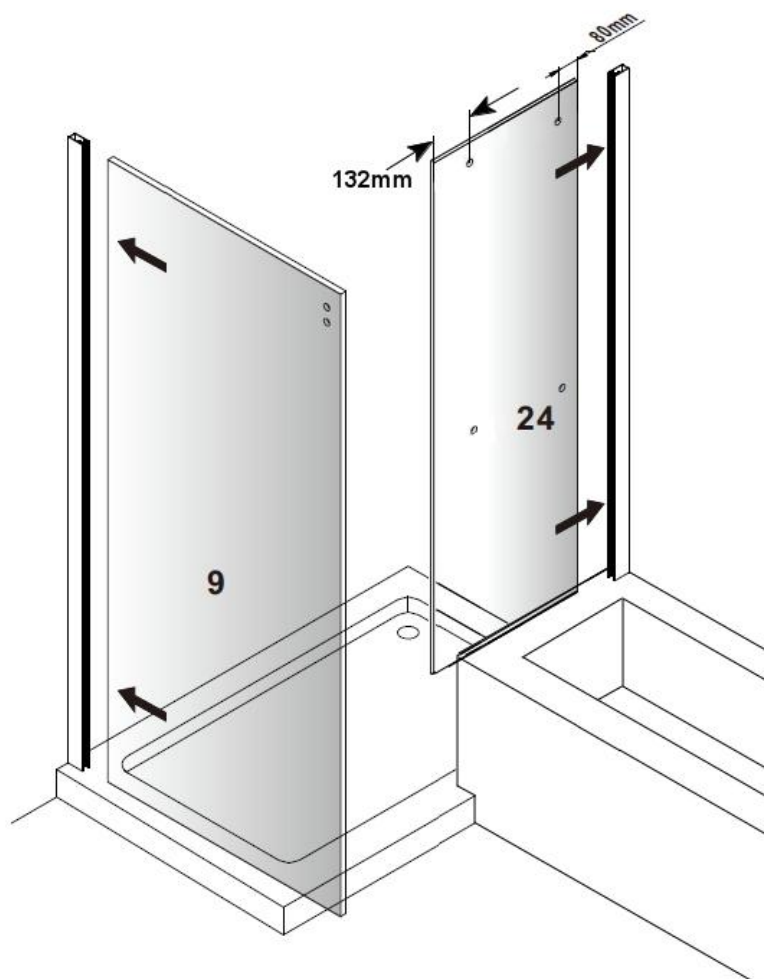



Water/eau inside intérieur

3

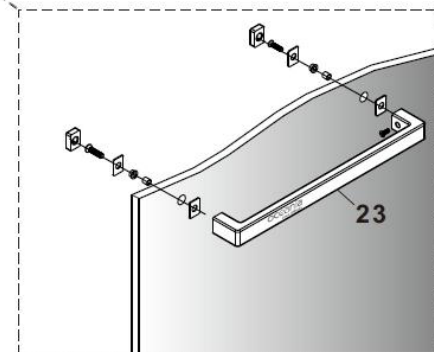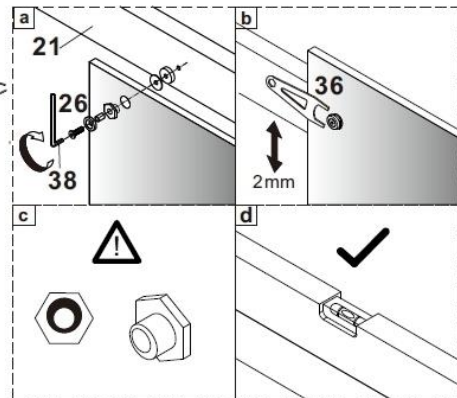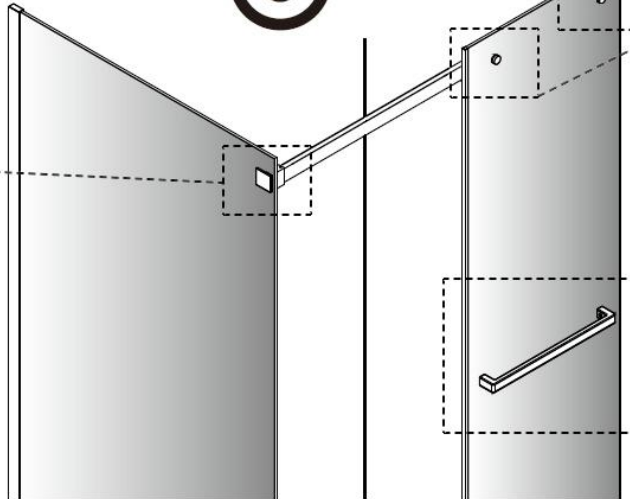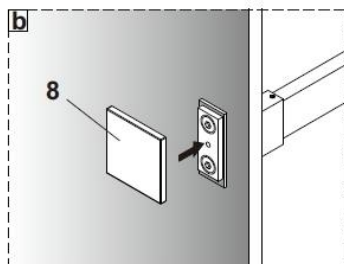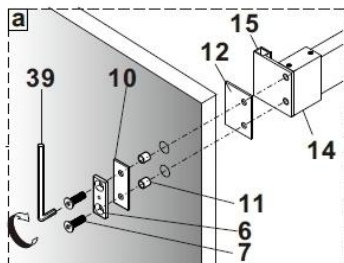


4

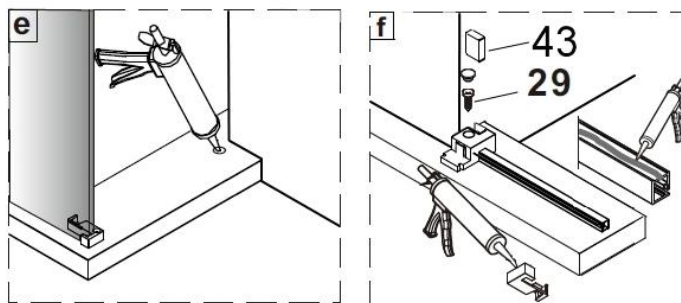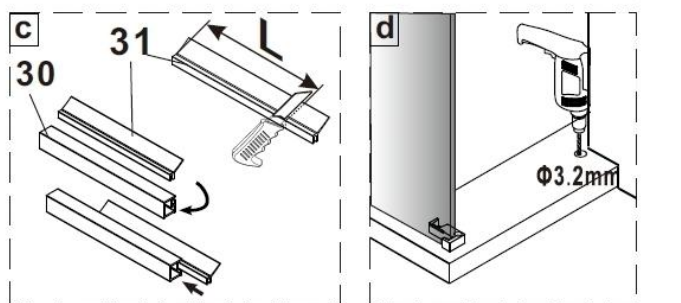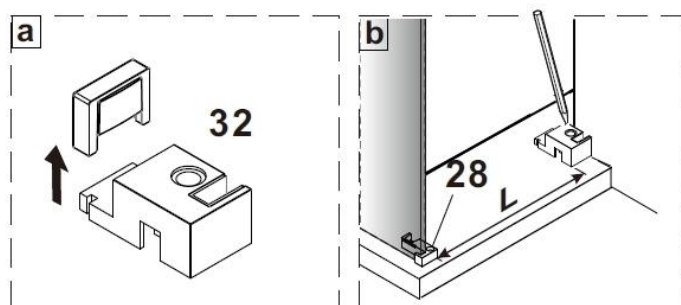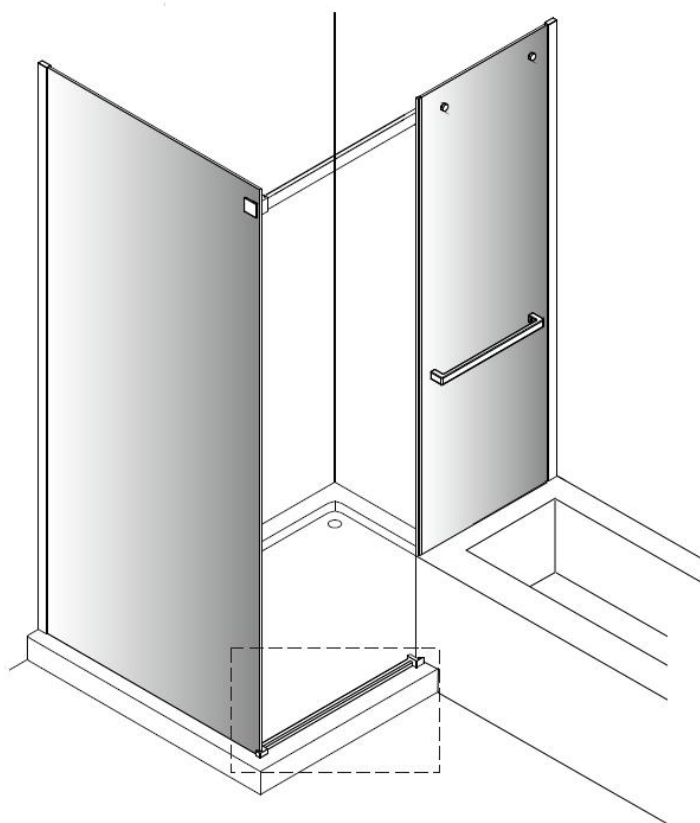







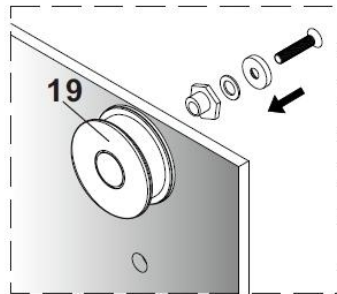


19


5

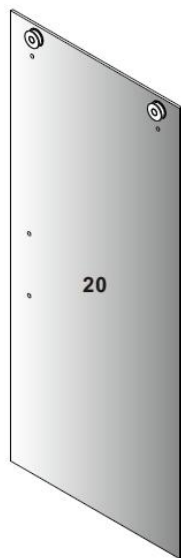


20

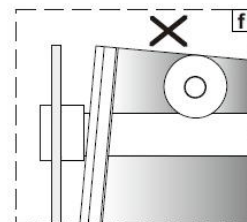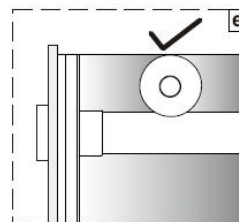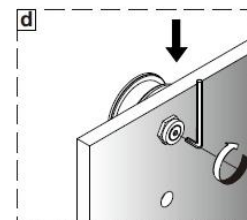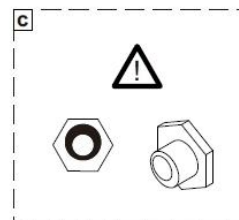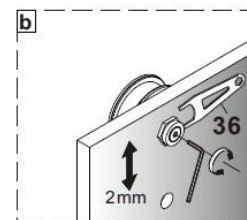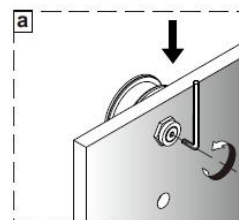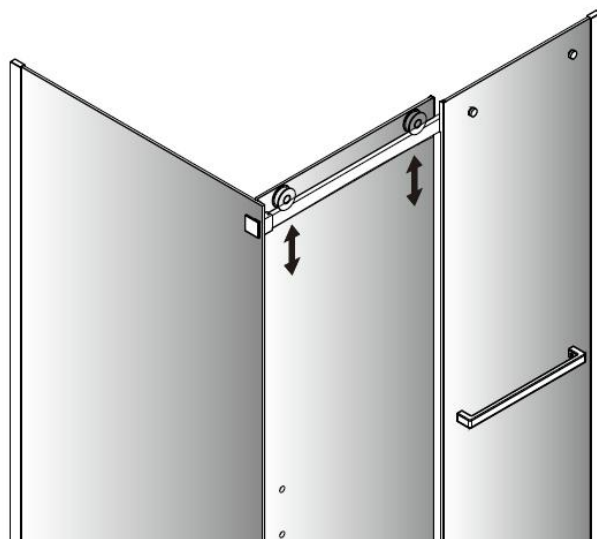



6

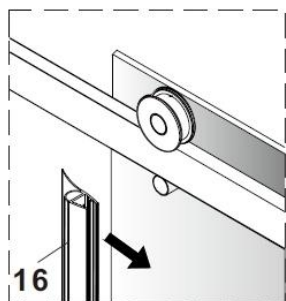





16

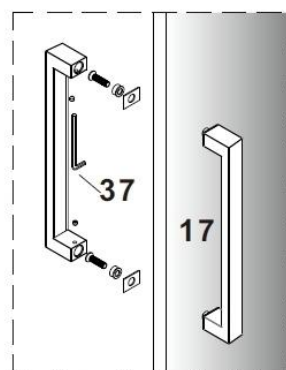


17

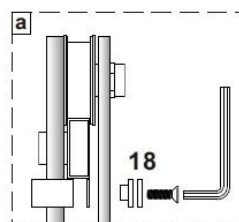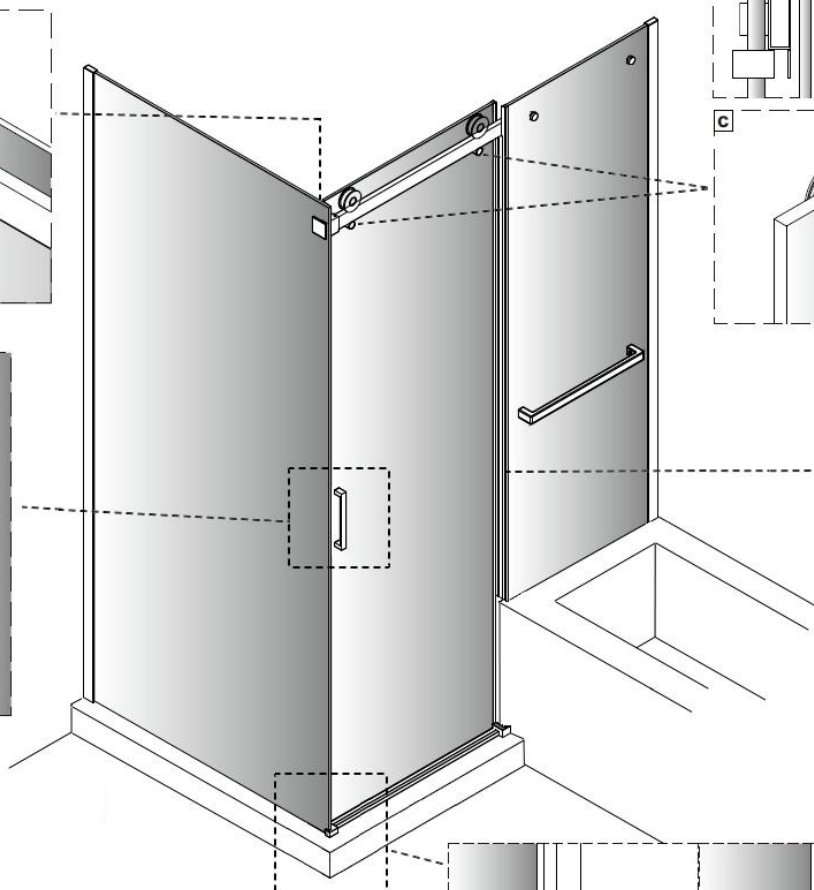









18

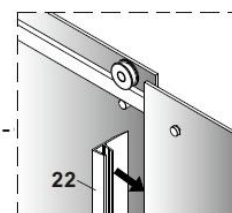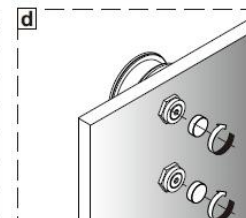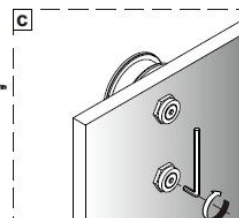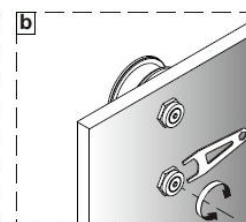

22

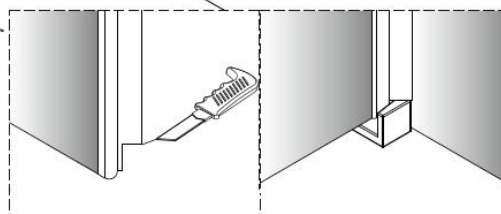

7

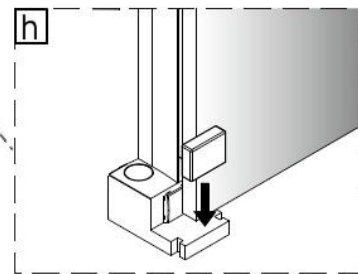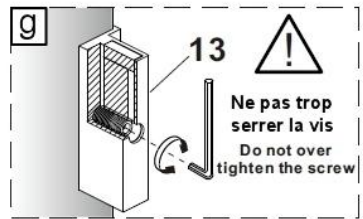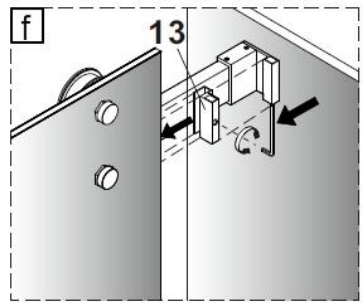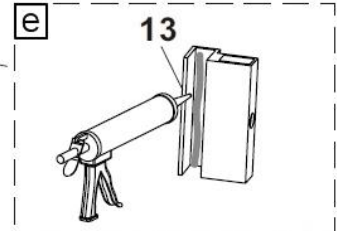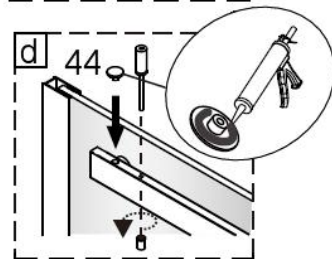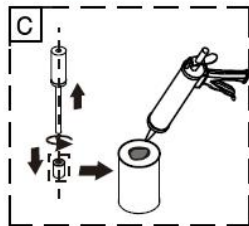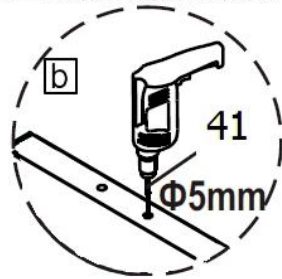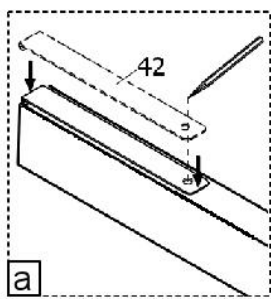

Ne pas trop
serrer la vis
Do not over
tighten the screw

8

