


Installation Instruction for Optimale Series Parallel Mounting (MP)

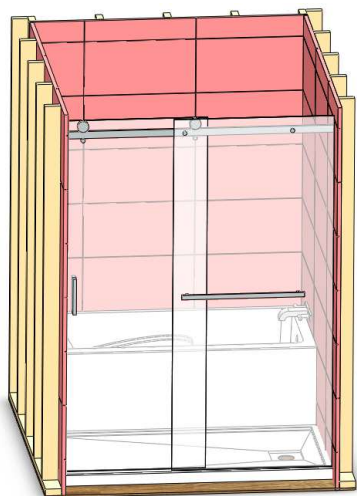


Serial Number : _____

Model Number : _____


Date of Manufacture : _____

- For Warranty, please refer to our website: <http://www.oceania-attitude.com>



- 1. Unwrap and inspect the product.**

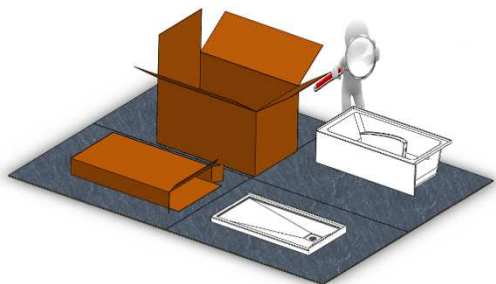


- 2. Make sur the distance between studs matches blow mesurements.**

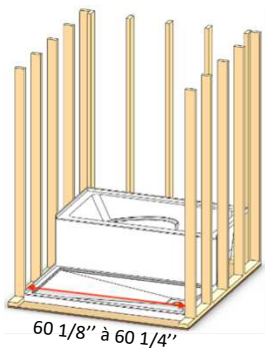


- 3. Place the bathtub and the base in their position. Leave a 1/8'' space (3 mm) between the skirt and the tub. Mark the position of the base.**

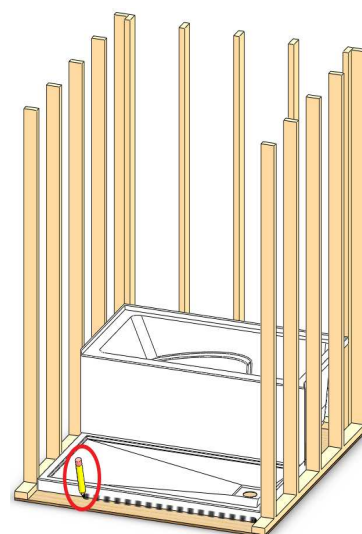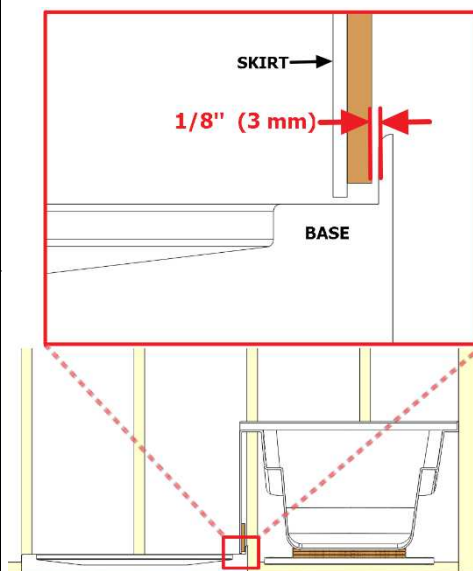



3. Remove the bathtub.

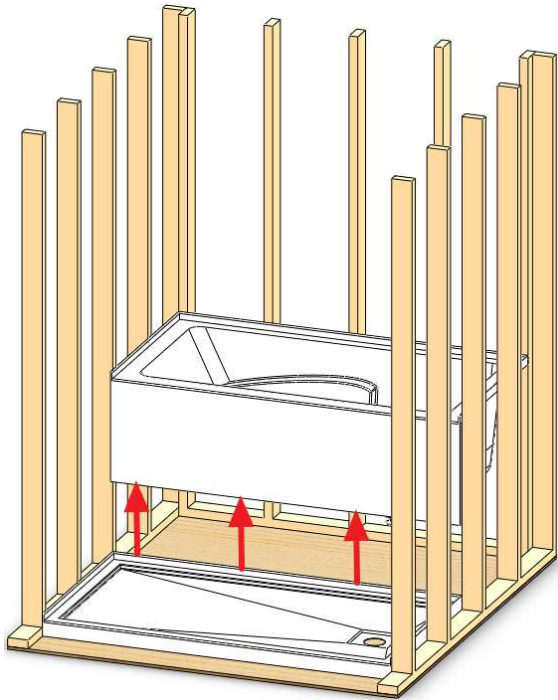


4. Install the base as described in the following Instruction Booklet:

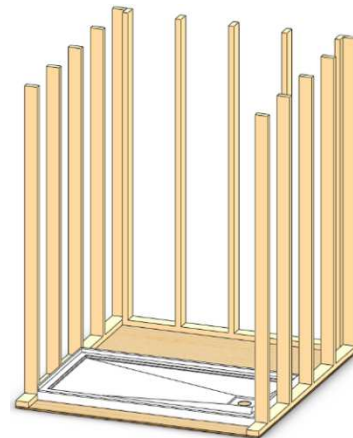

5. Place the bathtub, adjust the legs to leave a 1/8" space (3 mm) between the skirt and the base. Apply a bead of silicone between the skirt and the base.

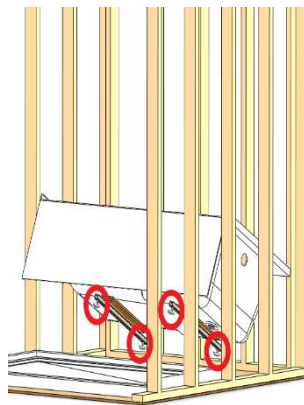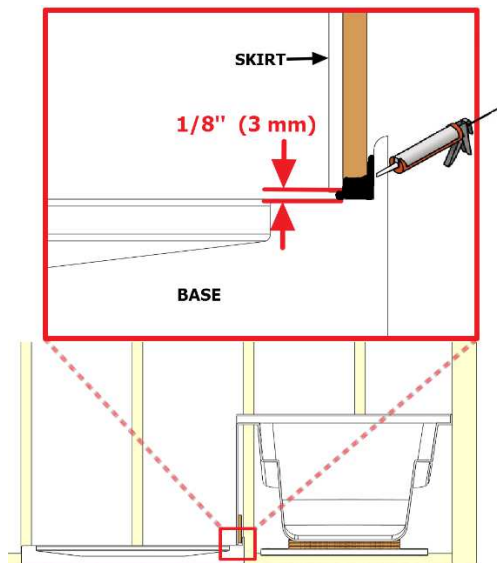

6. Finalize the installation of the tub as described in the following Instruction Booklet:

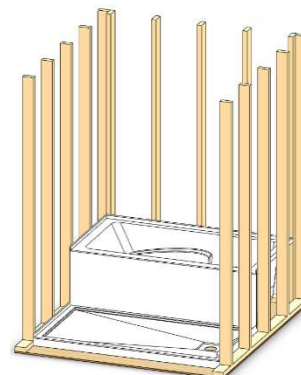


7. Let cure for 24 hours to allow the PL-type adhesive to dry completely.




8. Install the drywall and the tiles.


Note: It is the installer's responsibility to ensure that the entire installation is waterproof.

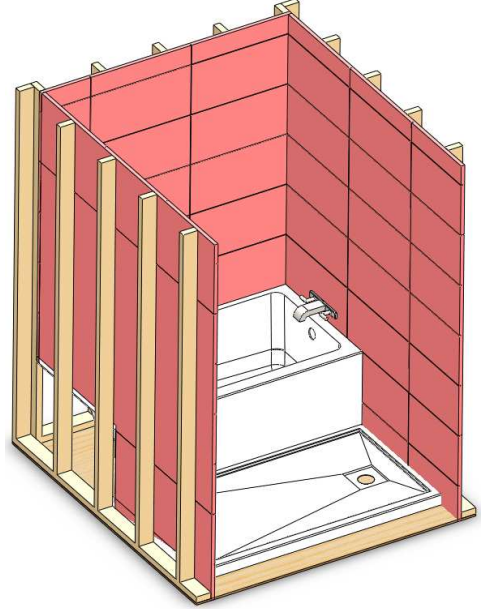

9. Install the doors as mentioned in the Instruction Booklet provided with the doors.

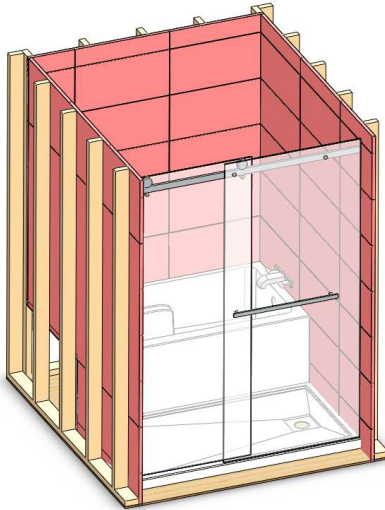

10. Apply silicone as specified in the figure below and let dry.

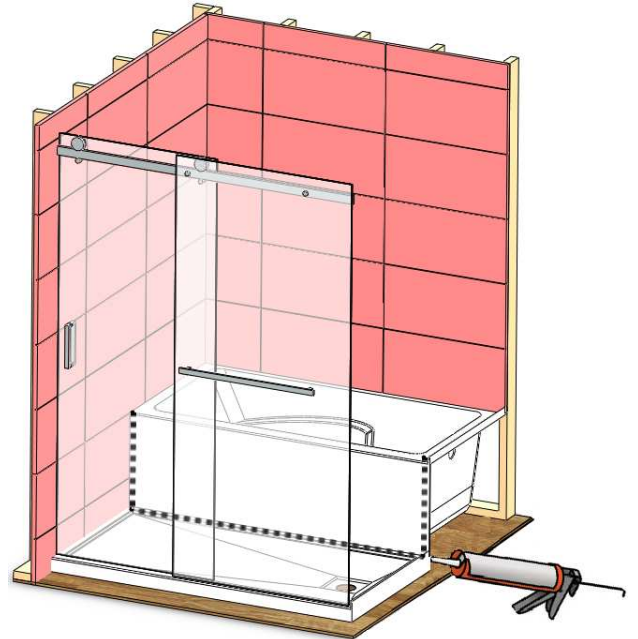

(for this image, the right hand wall was hidden)