

## Installation Procedure for Freestanding Bathtubs



**Serial Number:**\_\_\_\_\_

**Model Name:**\_\_\_\_\_

**Date of Manufacture:**\_\_\_\_\_

**Thank you for choosing an Oceania product for your project!**

- For warranty details, please refer to our website: <http://www.oceania-attitude.com>.
- Ensure that the structure supporting your bathtub can withstand a minimum weight of 1,200 lbs (545 kg).
- Consult your local building codes to ensure the installation complies with regulations.
- Protect your product during installation.
- A professional plumber is required for the installation of the plumbing and the bathtub.

### **IMPORTANT:**

READ AND CAREFULLY FOLLOW ALL INSTRUCTIONS BEFORE INSTALLING THE PRODUCT.


1. **DANGER:** To reduce the risk of injury or drowning, do not allow children to use this product unless constantly supervised by an adult.
2. **CAUTION:** To avoid injury, exercise care when entering or exiting the bathtub.
3. **CAUTION:** Risk of accidental injury or drowning: Do not consume alcohol, drugs, or medication before or during the use of the bathtub.
4. **CAUTION:** Risk of electric shock: Keep electrical devices such as hair dryers, lamps, phones, radios, or televisions at least 5 feet (1.5 meters) away from the bathtub.
5. **CAUTION:** Risk of hyperthermia and possible drowning: Water temperatures above 100°F (38°C) can be hazardous to your health. Check and adjust the water temperature before using the bathtub.
6. **CAUTION:** Misuse of essential oils in high concentrations can irritate the skin and damage the bathtub's surface. Some brands of Wintergreen essential oils are known to damage acrylic surfaces.

**1. Unwrap and inspect the product.**




**2. Place the bathtub in its final position. Adjust the legs so that the bathtub rests on its 4 legs, the skirt not touching the ground. (Leave 1/8" space)**

Note : For best results, install the bathtub on a perfectly leveled floor. If the floor is not leveled, it is the installer's responsibility to adjust using the leveling legs, to make sure the tub will drain correctly.

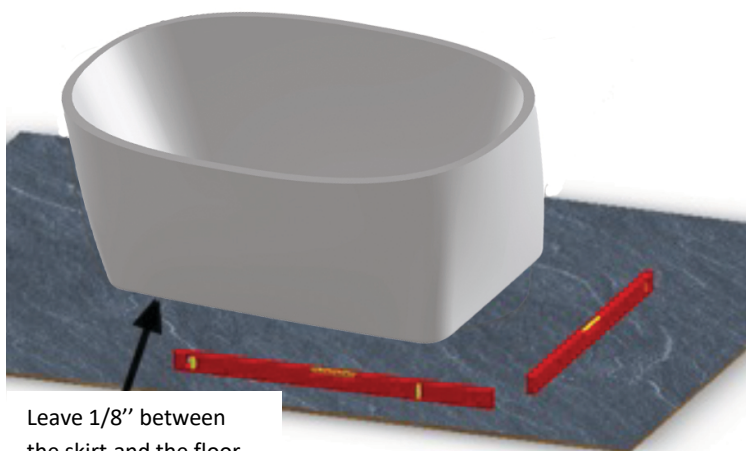

## Regular Installation without FBQD


3. If necessary, prepare the plumbing on the floor to obtain the correct height for the drain.

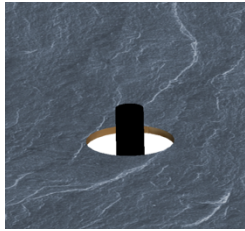


If using a FBQD Adaptator for freestanding tubs, please refer to the following installation video



4. Make a test without applying glue, to ensure the correct height of the plumbing.

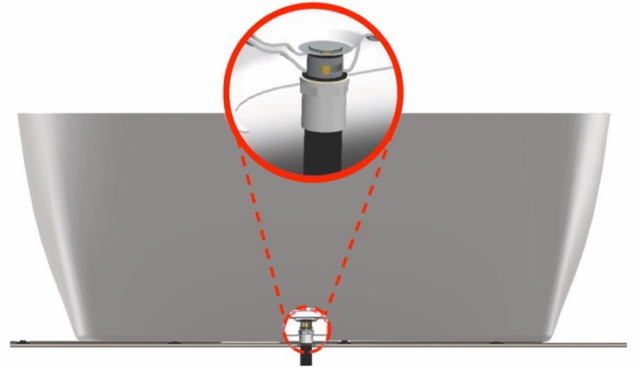

5. Apply silicone under the 4 legs of the bath, and the appropriate glue on the connecting joint (PVC). Install the bath in its final position.

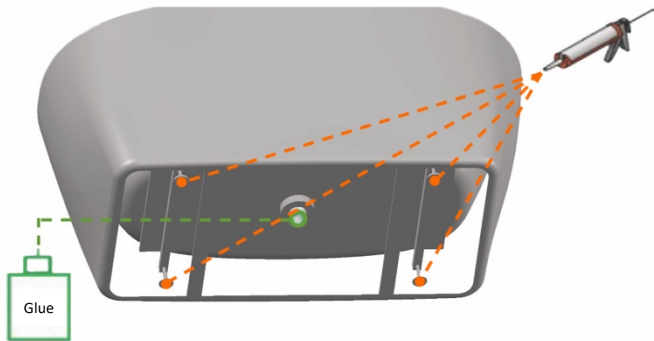

6. Let the silicone cure for 24h before using.

